





## WEIGHT DURING LOADING

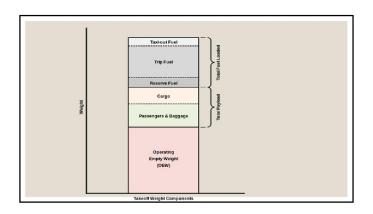


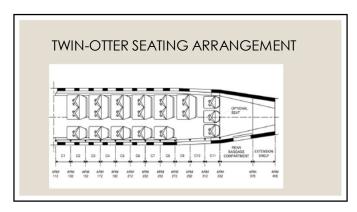


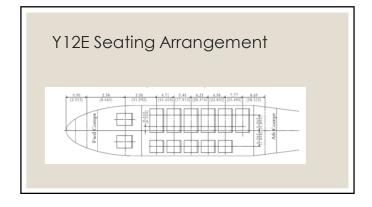


# Standard Empty Weight ALSO CALLED BASIC EMPTY WEIGHT (BEW) OR MANUFACTURER EMPTY WEIGHT (MEW) - It is the weight of the aircraft "as built" and includes the weight of - Structure - power plant, - furnishings, - installations, - systems and other equipment - excludes any crew, operating fluids, baggage, passengers, or usable fuel

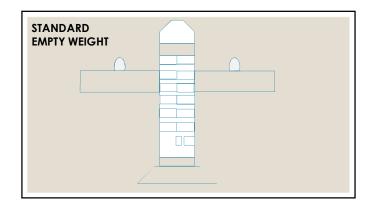

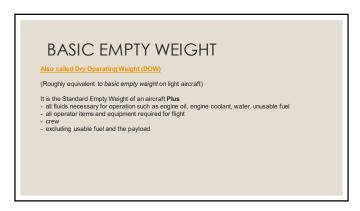

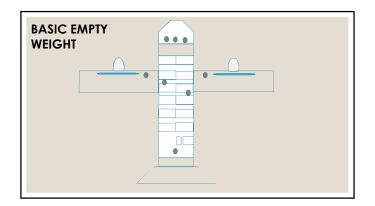


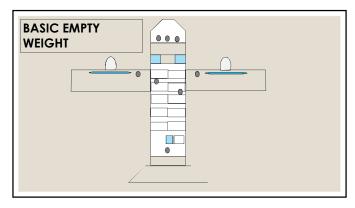

OPERATIONAL EMPTY WEIGHT (OEW)

• It is the BASIC Empty Weight of an aircraft **Plus** the fuel

• Does not include payload

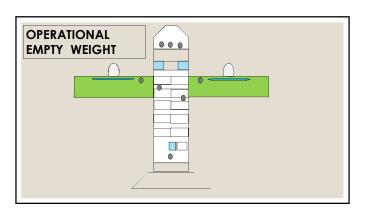

## **PAYLOAD**


It is the carrying capacity of an aircraft. It includes cargo, people, extra fuel. In the case of a commercial airliner, it may refer only to revenue-generating cargo or paying passengers.

# **ZERO FUEL WEIGHT (ZFW)**

This is the total weight of the airplane and all its contents (including unusable fuel), but excluding the total weight of the usable fuel on board.

As a flight progresses and fuel is consumed, the total weight of the airplane reduces, but the ZFW remains constant.

Maximum zero fuel weight (MZFW) is the maximum weight allowed before usable fuel and other specified usable agents (engine injection fluid, and other consumable propulsion agents) are loaded.

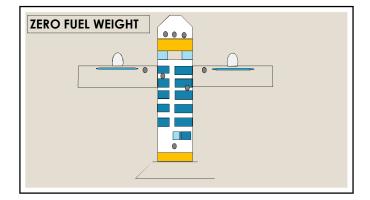

## **MAXIMUM ZERO FUEL WEIGHT (ZFW)**

OPERATIONAL EMPTY WEIGHT PLUS MAXIMUM PAYLOAD

#### **FUEL**

- - Fuel planned to be consumed during Taxiing of Aircraft
- TRIP FUEL
- Fuel Planned to be consumed during flight from point A to B
- HOLDING FUEL
  - Fuel Planned for Holding
- RESERVE FUEL
  - Fuel planned for diversion, weather and other unforeseen circumstances

## TOTAL FUEL

- •Sum of taxi, trip, holding and reserve fuel
- Maximum FUEL
- Maximum Fuel Capacity of Aircraft


EQUAL TO MAXIMUM FUEL CAPACITY OF AIRCRAFT

# RAMP WEIGHT (MRW)

- also called taxi weight (MTW)
- It is the maximum weight authorized for maneuvering (taxiing or towing) an aircraft on the ground.
- -ZERO FUEL WEIGHT+TOTAL FUEL


# MAXIMUM RAMP WEIGHT (MRW)

- also called maximum taxi weight (MTW)
- It is the maximum weight authorized for maneuvering (taxiing or towing) an aircraft on the ground.
- -MAXIMUM ZERO FUEL WEIGHT +MAXIMUM FUEL

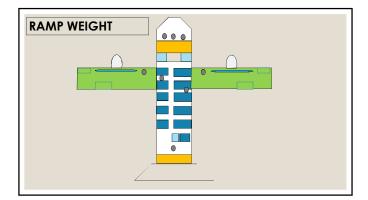

#### TAKEOFF WEIGHT

•RAMP WEIGHT minus Taxi Fuel

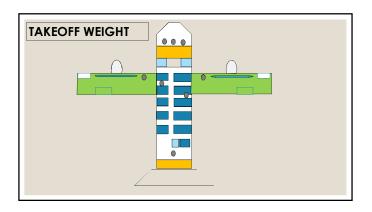

## MAXIMUM TAKEOFF WEIGHT (MTOW)

This is the maximum weight at which the pilot of the aircraft is allowed to attempt to take off.

## REGULATED TAKEOFF WEIGHT (RTOW)

- Depending on different factors (e.g. flap setting, altitude, air temperature, length of runway), RTOW or maximum permissible takeoff weight varies for each takeoff.
- olt can never be higher than MTOW.

# LANDING WEIGHT (MLW)

TAKEOFF WEIGHT minus TRIP FUEL

## MAXIMUM LANDING WEIGHT (MLW)

- $\circ\mbox{This}$  maximum weight at which an aircraft is permitted to land
- ∘ Is structurally limited

